

ADAPTOR PLATE FOR REACTORS

When reactors have a curved end nozzle, these adaptors are used as interface spacer to connect the glass/bellow with reactor.

A flat metal ring with rubber cushions is enveloped with PTFE, to provide ideal sealing. Only PTFE comes in the contact of process fluid.

Cat.Ref.	DN	D	D1	L
EMP1	25	25	60	10
EMP1.5	40	37	80	10
EMP2	50	50	100	10
EMP3	80	75	120	12
EMP4*	100	100	155	12
EMP6*	150	150	210	12
EMP9*	225	200	260	15
EMP12*	300	300	360	15

