


COLUMN COMPONENTS

COLUMN SECTIONS

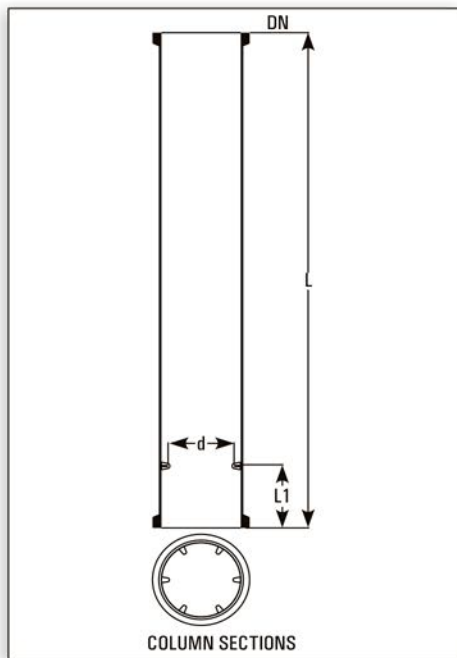

Column can be constructed either by using pipe sections with support plates or using column sections with packing supports.

Column sections are provided with fused shelf where packing support can rest.

| Cat.Ref. | DN | L | L1 | Minimum packing Size | Usual packing Size |
|-----------|-----|------|-----|----------------------|--------------------|
| CS3/1000 | 80 | 1000 | 75 | 9 | 12 |
| CS4/1000 | 100 | 1000 | 75 | 12 | 15 |
| CS6/1000 | 150 | 1000 | 75 | 15 | 25 |
| CS6/1500 | 150 | 1500 | 75 | 15 | 25 |
| CS9/1000 | 225 | 1000 | 100 | 20 | 25 |
| CS9/1500 | 225 | 1500 | 100 | 20 | 25 |
| CS12/1000 | 300 | 1000 | 100 | 25 | 25 |
| CS12/1500 | 300 | 1500 | 100 | 25 | 25 |
| CS16/1000 | 400 | 1000 | 150 | 25 | 25 |
| CS16/1500 | 400 | 1500 | 150 | 25 | 25 |
| CS18/1000 | 450 | 1000 | 150 | 25 | 25 |
| CS18/1500 | 450 | 1500 | 150 | 25 | 25 |
| CS24/1000 | 600 | 1000 | 200 | 40 | 40 |